

## LCD MONITOR



**PN-UN553S**  
**MODEL PN-UN553V**

## Dismantle Instruction

---

## Table of contents

---

1. Scope .....	3
2. Tools for dismantling.....	3
3. Dismantle Procedure .....	3
4. Back covers .....	4
5. PWB and other electronic components .....	5
(1) MAIN PWB .....	5
(2) POWER PWB.....	6
(3) Connector PWB.....	7
(4) KEY PWB.....	7
(5) IR Receiver/Indicator LED PWB .....	7
(6) T-CON PWB.....	7
(7) Converter PWB .....	7
(8) NFC PWB .....	7
6 LCD Module bezels/angles .....	8
7 Capacitors.....	9
8 Parts List .....	10

## 1. Scope

This document describes dismantling instruction according to Annex VII of Directive 2012/19/EU.

## 2. Tools for dismantling

- Screw Driver
- Nipper



## 3. Dismantle Procedure

This product can be dismantled by below steps.

1. Remove Back covers (section 4)
2. Remove Printed circuit boards (section 5)
3. Dismantle LCD (section 6)
4. Remove Electrolyte Capacitors (section 7)

## 4. Back covers

back cover can be removed by screw driver.

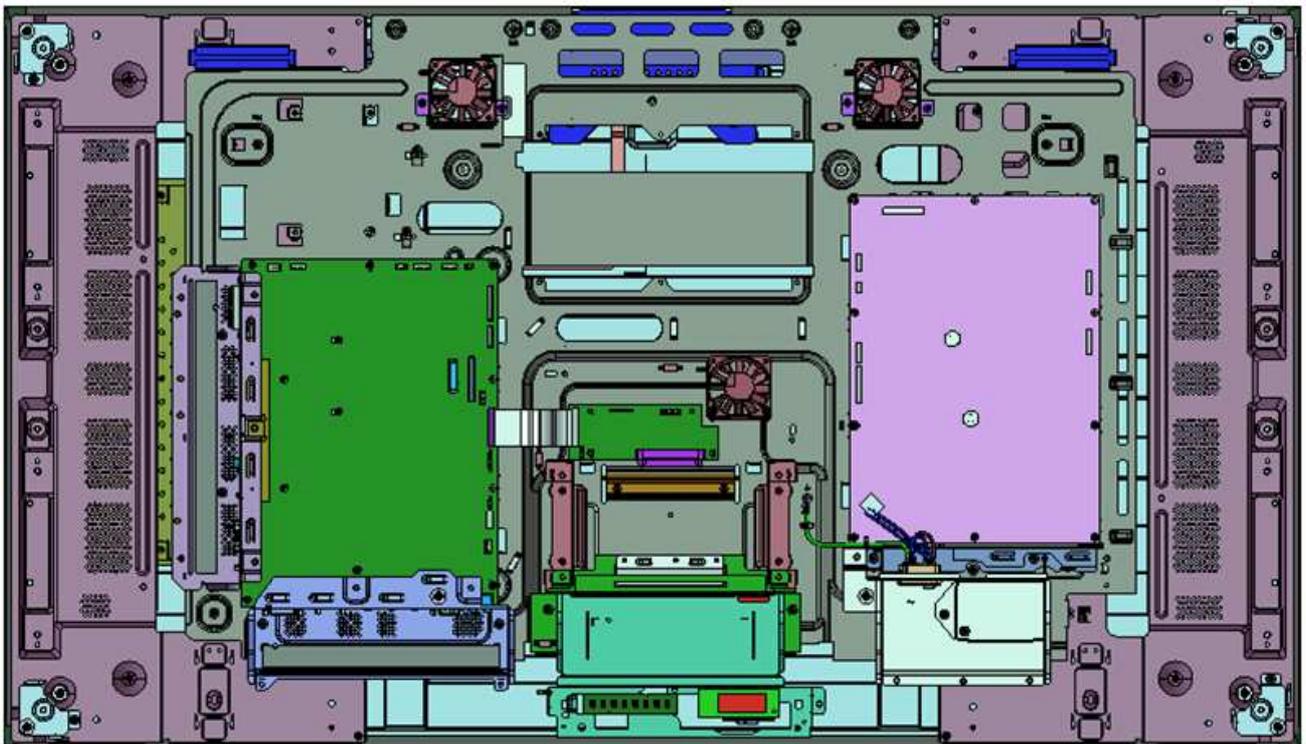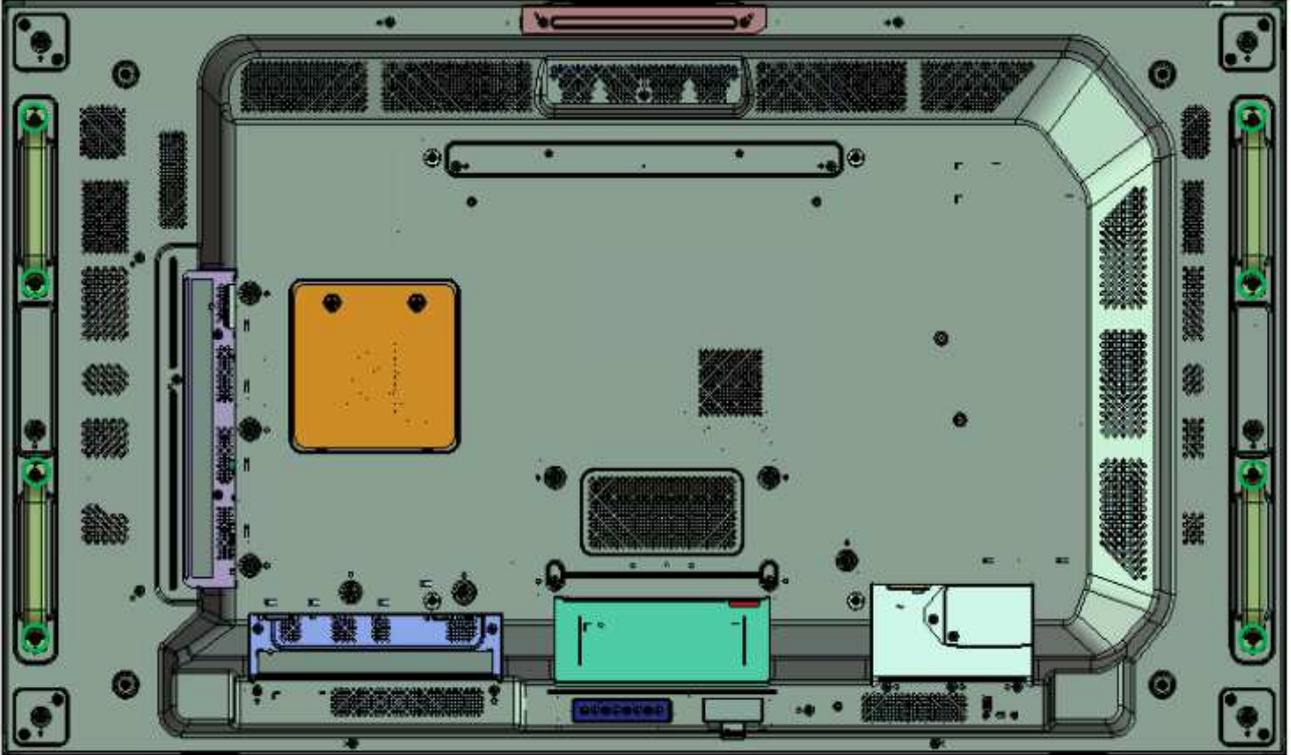


## 5. PWB and other electronic components

All electronic components can be removed by screw driver.

(1) MAIN PWB



(2) POWER PWB

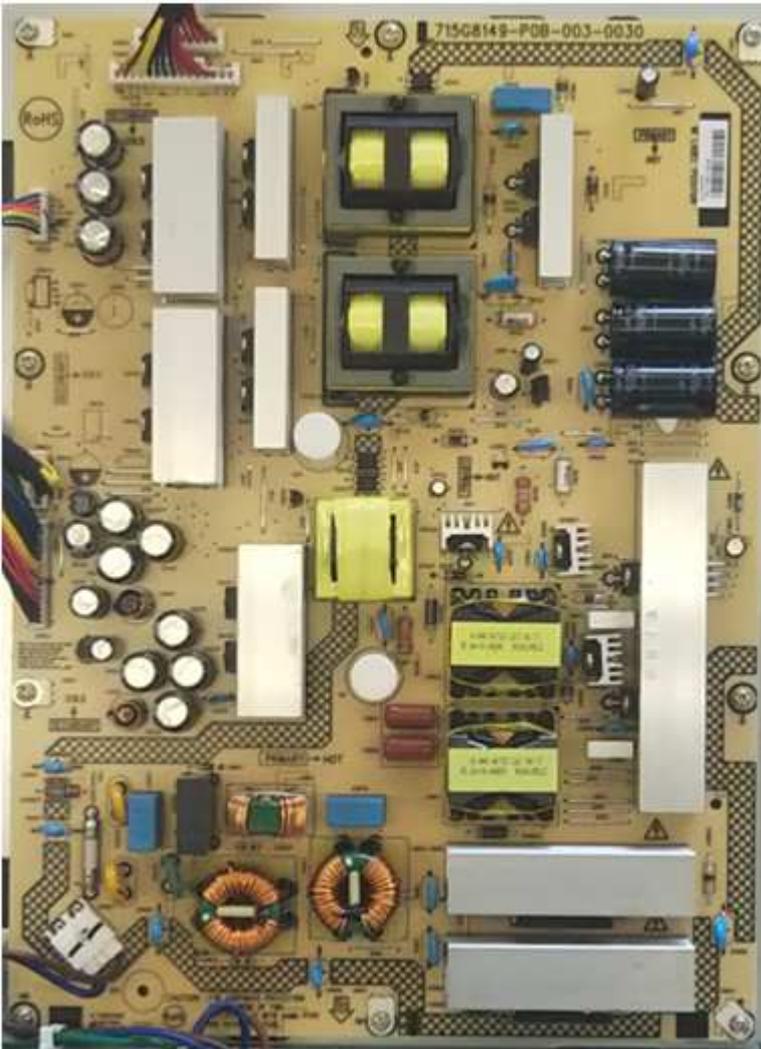

(3) Connector PWB



(4) KEY PWB



(5) IR Receiver/Indicator LED PWB



(6) T-CON PWB




(7) Converter PWB



(8) NFC PWB



## 7 LCD Module bezels/angles

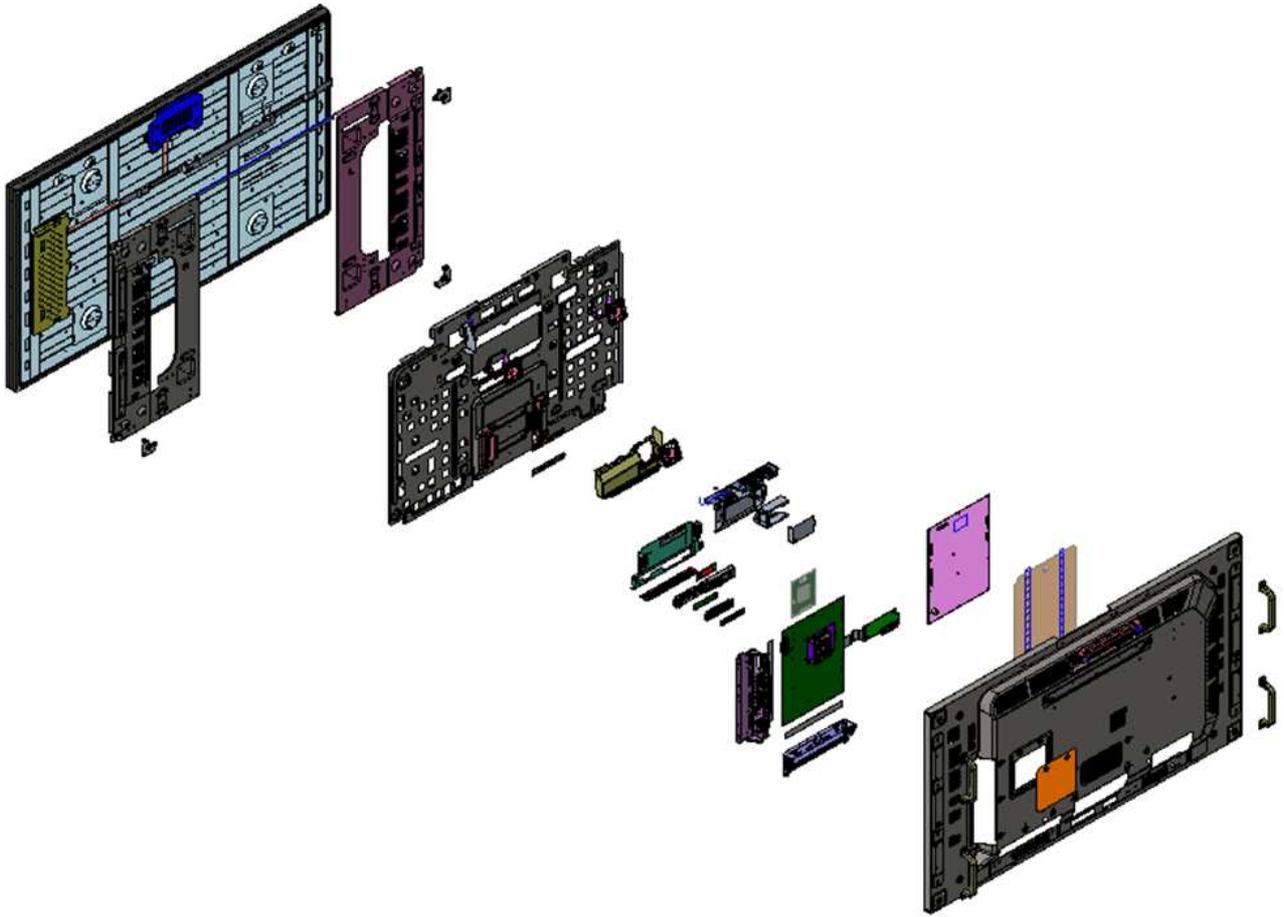

## 8 Capacitors

Capacitors which diameter is larger than 25mm is installed on the Power PWB.

And these capacitors can be removed by using nipper to cut the leads.



## 9 Parts List

The spare parts listed in the column "Spare Parts" below are kept available in accordance to legal requirements of EU Regulation 2019/2021 for professional repairer.

Spare Part	Part Name/ Element of Part
a. Internal power board	Power PWB
b. Connectors to connect external equipment	Main PWB
c. Batteries and Accumulators	not applicable
d. DVD/Blue-Ray module	not applicable
e. HD/SSD module	not applicable